


EPOS

IMPACT DW Pro 1 - HS

Battery Removal Guide

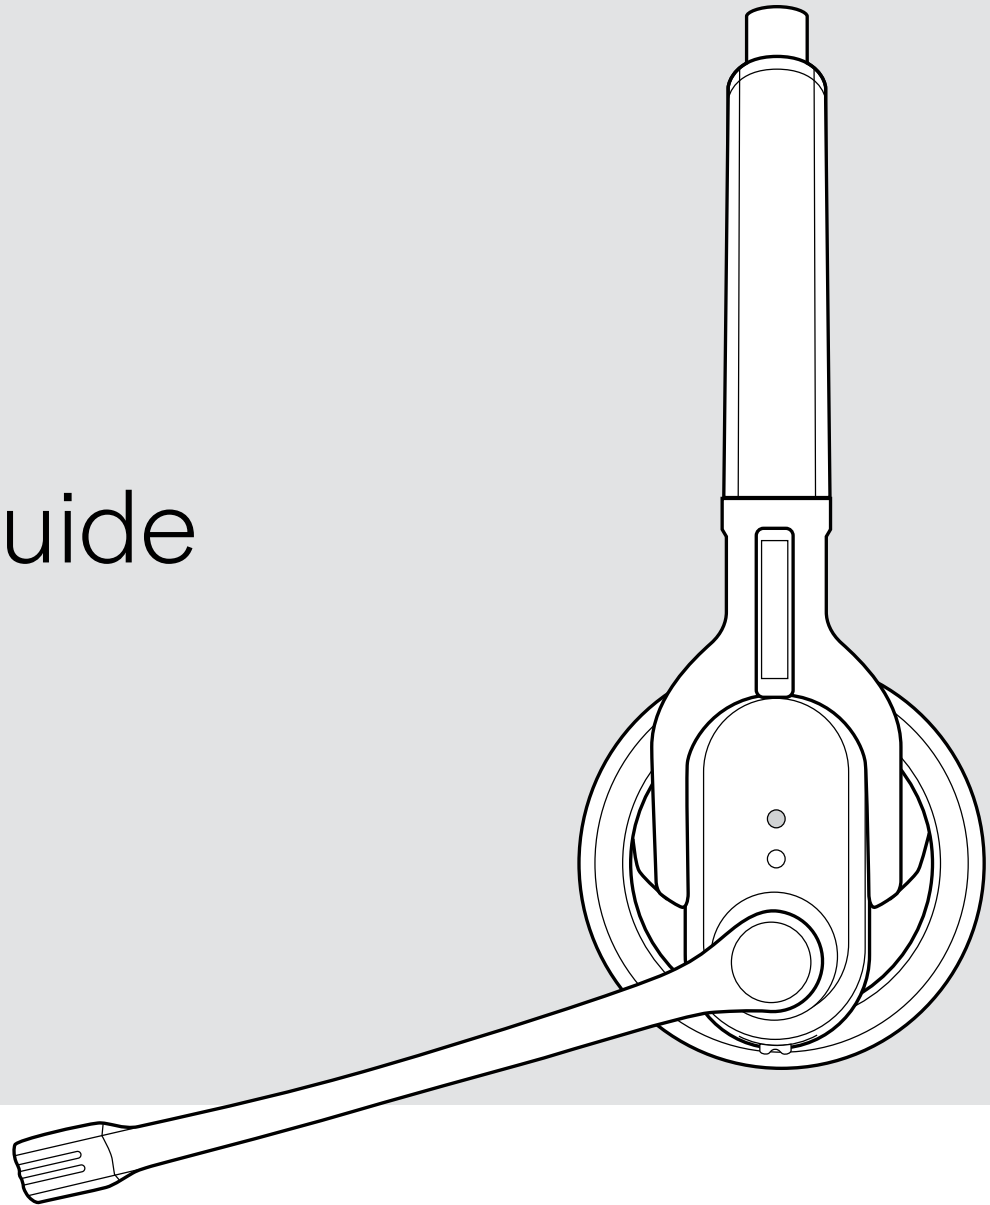



DSEA A/S

Kongebakken 9, DK-2765 Smørum, Denmark
www.eposaudio.com

Publ. 12/21, A01

THE POWER OF AUDIO

Battery Removal Guide

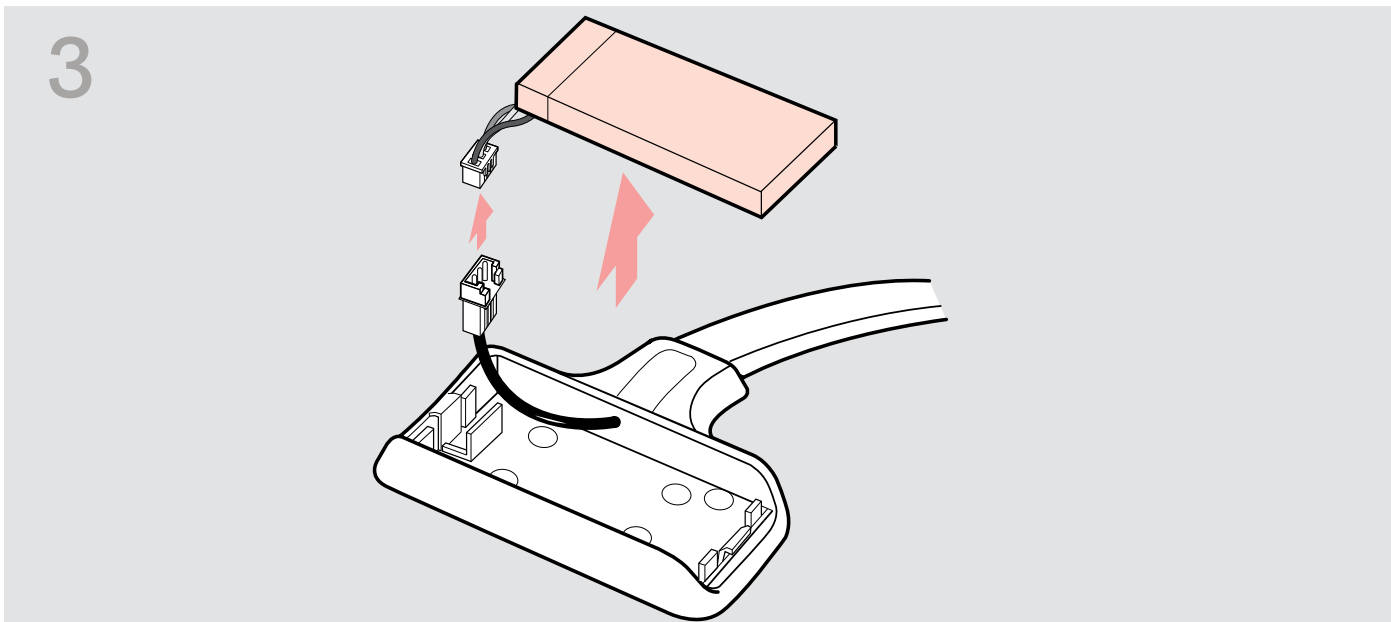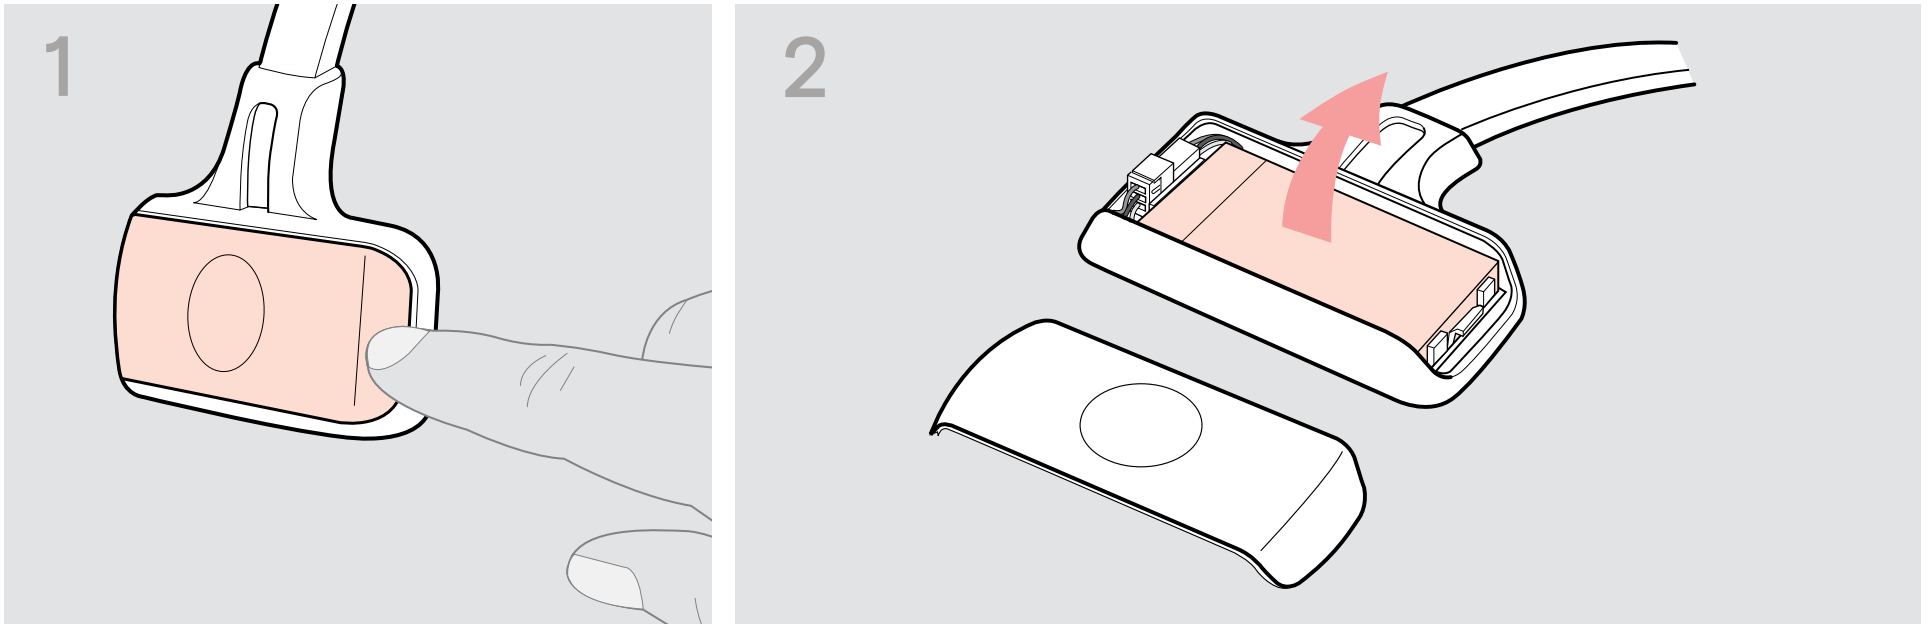

1. Open the battery compartment cover.
2. Lift the rechargeable battery.
3. Unplug the connector and remove the rechargeable battery.